


Bumper - Fast Fix

No screws - Quick labour saving assembly

Simply place the foot into prepared 8mm hole and push centre pin for secure fixing.

Part Number	Mount Hole A	Outside Diameter B	Outside Diameter C	Height D	Length E	Material
25-PFF1304	5.0	12.7	12.0	4.4	8.5	P.E
25-PFF1604	5.0	15.7	15.0	4.4	8.5	P.E
25-PFF2006	8.0	20.8	19.8	6.4	11.8	TPR
25-PFF2010	8.0	20.0	18.0	10.0	15.4	TPR
25-PFF2015	8.0	20.0	18.0	15.0	20.8	TPR
25-PFF2015PE	8.0	20.0	18.0	15.0	20.8	P.E
25-PFF2018	8.0	20.0	18.0	18.0	24.3	P.E
25-PFF3013	8.0	30.0	27.7	12.8	19.0	TPR

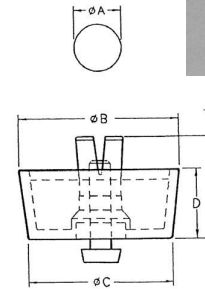

Material: TPR = Black Thermoplastic Rubber & P.E = Polyethylene

Bumper - Self Fix Rubber


No screws - Quick labour saving assembly

Simply fit as you would a grommet

Part Number	Mount Hole	Outside Diameter	Height
25-TNF08/2	5.0	8.0	2.0
25-TNF08/2.5	4.0	8.0	2.5
25-TNF10/2	5.2	9.5	2.4
25-TNF10/5	8.2	10.6	5.0
25-TNF13/4	6.4	13.0	4.2



Material: Black Rubber

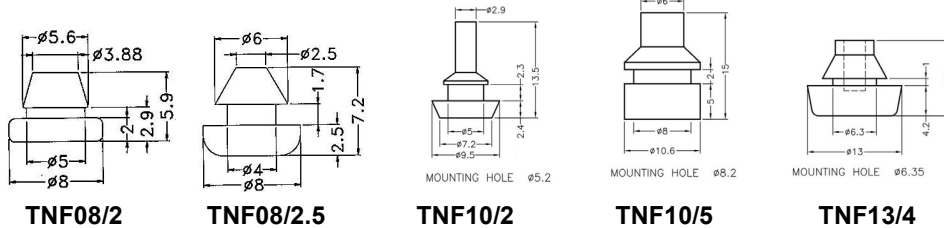

Bumper - Round with Rubber Pad

Secure mounting by screw or rivet

Part Number	Mount Hole A	Outside Diameter B	Outside Diameter C	Height D	Pad Material (W)
25-RS-50N(RU)	4.0	50	40	14.0	Rubber

Material: Black ABS Plastic with Rubber non-skid pad

